

SUMP 2000

ASSEMBLY INSTRUCTIONS


Fold the four sides of the plastic sump to form a box.

Clip the corners together

Remove the relevant blanking plug/s to receive pipework.

Place sump open side downwards on sub-base so that top is level with top of hard-core.

Connect pipes and necessary bends to extend beyond concrete floor slab or external wall.

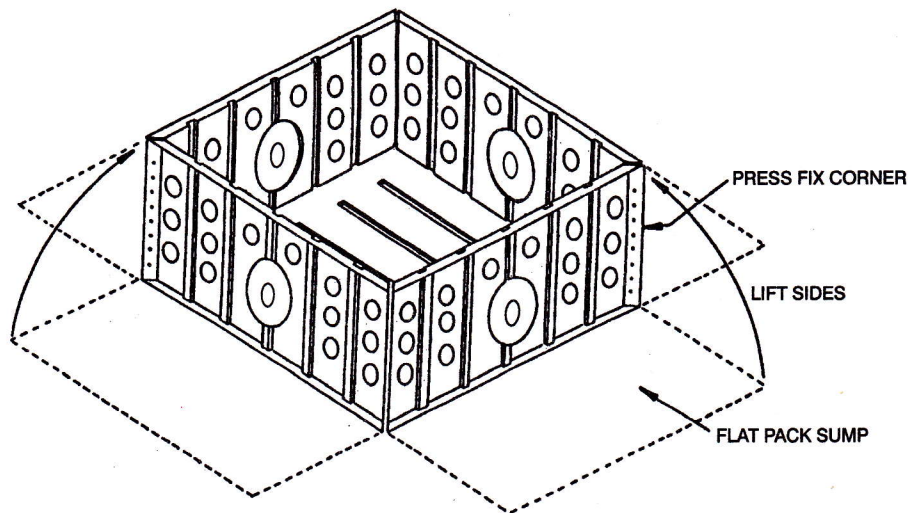


INSTALLATION INSTRUCTIONS

RADON SPECIFICATION

Building Regulations Part C. Section 2.7

B.R.E. Report B.R. 211

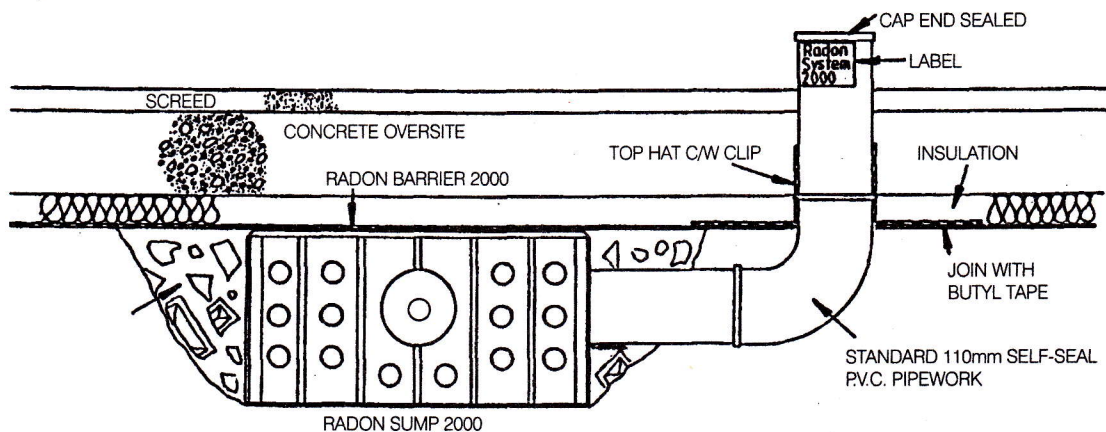

**DETAIL SHOWING PROTECTIVE MEASURES FOR
PRIMARY PROTECTION IN A NEW DWELLING**

Telephone (01604) 494118

www.radon.co.uk